




REMOTE CONTROL MANUAL

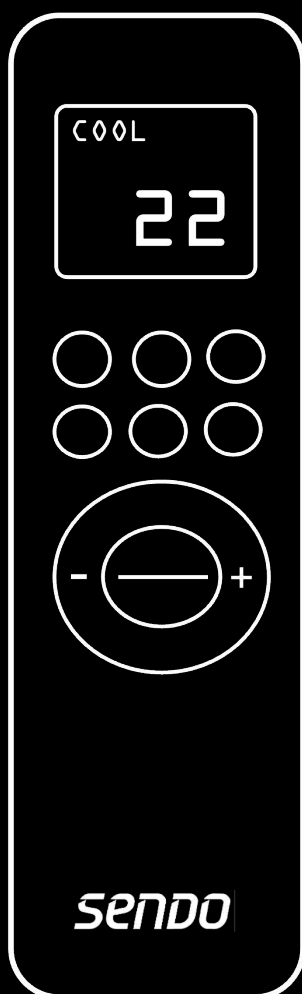

Thank you for choosing Sendo air-conditioner for your comfort living.
We truly appreciate your trust in our product.
To receive more complete service, please register your product at www.sendo.world

REMOTE CONTROLLER

1. CONTENTS _____ pg. 1
2. PRECAUTIONS _____ pg. 2
3. BUTTONS DESCRIPTION _____ pg. 3
4. USAGE _____ pg. 8
 - FIX BATTERIES
 - AUTO OPERATION MODE
 - COOLING / HEATING OPERATION MODE
 - FAN OPERATION MODE
 - DRYING OPERATION MODE

2. PRECAUTIONS

PRECAUTIONS


- * Before first time use of the remote controller, install the batteries and ensure the “+” and “-” poles are correctly positioned
- * Ensure the remote controller is pointed to the signal receiving window, and that there is no obstruction in between and the distance is 8m at the maximum.
- * Do not let the remote controller drop or fling it at will.
- * Do not let any liquid in the remote controller.
- * Do not expose the remote controller directly to the sunlight or excessive heat.
- * If the remote controller does not function normally, remove the batteries for 30 seconds before reinstall them. If that doesn't work, replace the batteries.
- * When replacing the batteries, do not mix the new batteries with old ones or mix batteries of different types, which could cause failure of the remote controller.
- * If the remote controller is not to be used for a long period of time, remove the batteries first, lest the leakage from them may damage the remote controller.
- * Properly dispose the discarded batteries.

NOTE

- * **This is a universal remote controller which provide all the function buttons. Please understand that some of the buttons may not function, depending on the specific air conditioner you have purchased. (If a specific function is not available on the air conditioner, pressing the corresponding button will simply have no respond.)**
- * **HEAT and ELE.H functions are not available for cool only models, thus these two buttons do not work correspondingly.**

3. BUTTONS DESCRIPTION

REMOTE CONTROLLER BUTTONS AND DISPLAYS

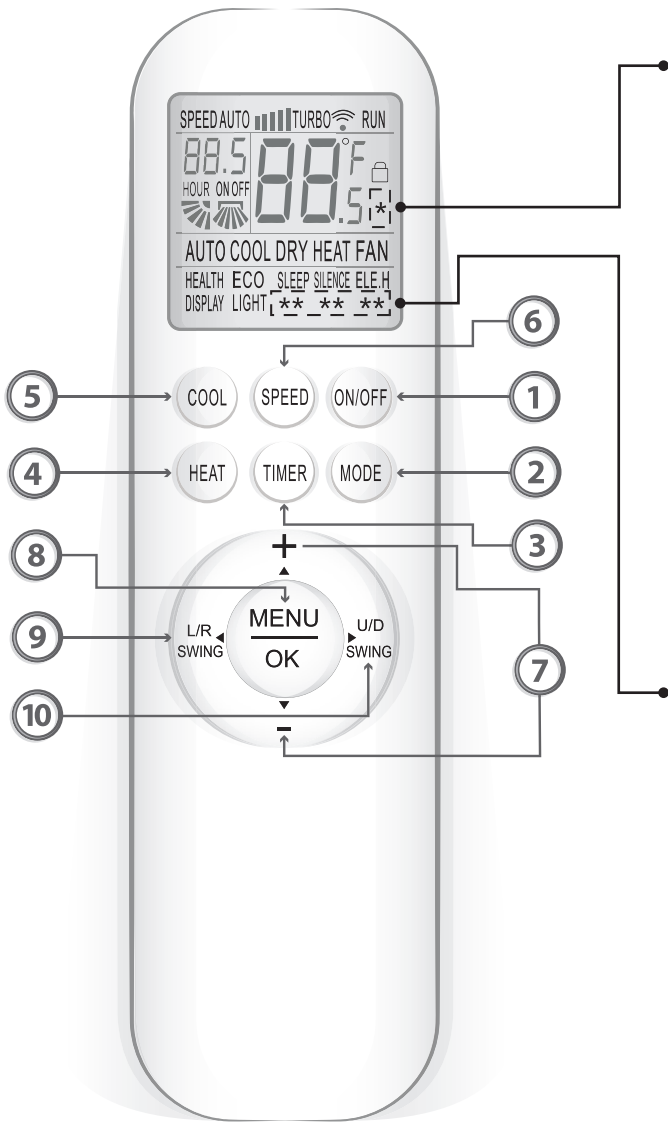

* **Model:** YKR-T/011E is shown as



* **Model:** YKR-T/021E is shown as



* **Model:** YKR-T/011E is shown as



* **Model:** YKR-T/021E is shown as



Note:

The remote controller display all symbols during power-on and only those corresponding to current operation the rest of the time.

3. BUTTONS DESCRIPTION

①	ON / OFF	- Press this button to turn (ON / OFF) the unit. - This will clear the existing timer and (SLEEP) settings.	
②	MODE	- Press this button, you can select the running mode as follows: 	NOTE <i>HEAT mode is not available for cool only units.</i>
③	TIMER	- With the unit (ON), press this button to set (OFF) timer or with it (OFF) to set (ON) timer. - Press this button once, the (ON/OFF) will flash. Press (+) or (-) to set the number of hours in which the unit will be turned (ON/OFF), with an interval of 0.5 hour, and a range of 0.5 - 24 hours. - Press it again to confirm the setting, the (ON/OFF) will stop flashing. - If the timer button is not pressed longer than 10 seconds after the (ON/OFF) start flashing, the timer setting will be exited. - If a timer setting is confirmed, pressing this button again will cancel it.	
④	HEAT	- Press this button to enter (HEAT) mode.	
⑤	COOL	- Press this button to enter (COOL) mode.	
⑥	SPEED	- Press this button, you can select the fan speed as follows: 	NOTE <i>AUTO air speed is not available in FAN mode. This button is invalid in dry mode.</i>
⑦	+ & -	- Each time the (+) is pressed, the temperature setting will increase by 1°C (1°F) and each time the (-) is pressed, it will decrease by 1°C (1°F). - The temperature setting ranges from 16°C (60°F) ~ 32°C (90°F).	NOTE <i>The temperature cannot be set in AUTO or FAN mode.</i>
⑧	MENU & OK	- Press (MENU) button to enter the function selection mode. Then press as follows:  - to choose the function which you want. After, press (OK) button, turn on this function. - In function selection mode, press as above, the character in LCD will be flashing if the function can be selected.	
⑨	L/R SWING	- Press this button to activate left / right swing and press it again to fix the swing position.	
⑩	U/D SWING	- Press this button to activate up / down swing and press it again to fix the swing position. - When the unit is on, press the (U/D SWING) button and hold for 3 seconds, the button will shift to be the functional button of (Rated swinging), and then press the (U/D SWING) button to select the positions of Rated swinging. - Only by pressing the (U/D SWING) button again and hold for 3 seconds or reinstall the battery of the remote control, can the (U/D SWING) button resume its original function. The power (on/off) button of the remote control can not enable the exit of the (Rated swinging) function.	

3. BUTTONS DESCRIPTION

HEALTH	- When the unit is on, press (MENU) button ,then press  and to choose (HEALTH) character, when the (HEALTH) character will blink, and press the (OK) button to highlight (not highlight) the (HEALTH) character, which will activate (deactivate) the health function.	
ECO	- In (COOL) mode, the variable frequency air-conditioner will enter the (ECO) mode, which consumes the least electricity, and exit it automatically 8 hours after. - The (ECO) mode is not available on fixed frequency air-conditioner. - Changing modes or turning off the remote controller automatically cancels the (ECO) function. - In the cooling mode, press the (MENU) button, press  and to choose the (ECO) character, when the (ECO) character will blink, and press the (OK) button to highlight (not highlight) the (ECO) character, which will activate (deactivate) the (ECO) function.	NOTE <i>The electricity consumption is affected by the ambient temperature and the house structure etc., and when the ambient temperature is high or the house has a large area, be cautious to use the ECO mode.</i>
SLEEP	- When the unit is on, press (MENU) button, then press  and to choose the (SLEEP) character, when the (SLEEP) character will blink, and press the (OK) button to highlight (not highlight) the (SLEEP) character, which will activate (deactivate) the function of sleep mode. - The unit will exit (SLEEP) mode after 10 hours of continuous operation and restore to the previous status.	NOTE <i>The SLEEP function cannot be activated in FAN and AUTO mode. In the sleep mode, the screen of the air-conditioner is off.</i>
SILENCE	- When the unit is on, press the (MENU) button, then press  and to choose the (SILENCE) character, when the (SILENCE) character will blink, and press the (OK) button to highlight (not highlight) the (SILENCE) character, which will activate (deactivate) the function of silent wind.	
ELE.H	- When the unit is on, press the (MENU) button, then press  and to choose the (SILENCE) character, when the (SILENCE) character will blink, and press the (OK) button to highlight (not highlight) the (SILENCE) character, which will activate (deactivate) the function of silent wind. - The unit will activate the auxiliary heating function automatically according to the ambient temperature, so as to accelerate the heating (this button is disabled on some models).	

3. BUTTONS DESCRIPTION

DISPLAY	- Press the (MENU) button, then press  - and to choose the (DISPLAY) character, when the character (DISPLAY) will blink, and press the (OK) button to activate (deactivate) the function of screen display.
LIGHT	- The unit will activate or deactivate automatically the function of display on the air-conditioner screen according to the indoor ambient brightness. - When the unit is on, press the (MENU) button, then press  - and to choose the (LIGHT) character, when the (LIGHT) character will blink, and press the (OK) button to highlight (not highlight) the character (LIGHT), which will activate (deactivate) the function of light sensing.
COSY (Only YKR-T/011E)	- When the air-conditioner is on cooling modes, press the (MENU) button, then press  - and to choose the (COSY) character, when the (COSY) character will blink, and press the (OK) button to highlight (not highlight) the character (COSY), which will activate (deactivate) the function of cleaning. - When the (COSY) function is on, the fan speed is auto and it will cancel the swinging function. When the (COSY) function is on, these operations that turn off the unit, change the mode, and set (SLEEP), fan speed, swinging function will automatically exit the (COSY) function, then restore to the previous status.
HUMI (Only YKR-T/011E)	- Press the (MENU) button, then press  - and to choose the (HUMI) character, when the (HUMI) character will blink, and press the (OK) button to highlight (not highlight) the (HUMI) character, which will activate (deactivate) the humidifying function. NOTE <i>The humidifying function is not available under the dry mode.</i>
iCLEAN	- The unit will clean automatically the dusts on the evaporator and dry or blow-dry the moisture. - When the air-conditioner is off, press the (MENU) button, then press  - and to choose the (iCLEAN) character, when the (iCLEAN) character will blink, and press the (OK) button to highlight (not highlight) the character (iCLEAN), which will activate (deactivate) the function of cleaning. - The cleaning function will close automatically after 30 minutes.
Child - lock	- Press the (HEAT) and (MODE) buttons at the same time and hold for at least 3 seconds to activate or deactivate the child-lock function. - When the child-lock function is on, the remote control will indicate as follows. 

3. BUTTONS DESCRIPTION

Anti - F (Only YKR-T/021E)	- Anti-F function: When the unit is closed under the modes of cooling, dry or auto (cooling), it will continue to operate for about 3 minutes to dry the moisture on the evaporator, so as to prevent the accumulation of bacteria on the evaporator, which causes fungus and strange smell and is harmful to the health. - When the unit is off, press the (MENU) button, then press and to choose the (Anti-F) character, when the (Anti-F) character will blink, and press the (OK) button to highlight (not highlight) the (Anti-F) character, which will activate (deactivate) the (Anti-F) function.				
I-FEEL (Only YKR-T/021E)	- When the unit is on, press the (MENU) button, then press and to choose the (I-FEEL) character, when the (I-FEEL) character will blink, and press the (OK) button to highlight (not highlight) the (I-FEEL) and character which will activate (deactivate) the (I-FEEL) function.				
°C / °F	<table border="1"><thead><tr><th data-bbox="384 887 738 936"></th><th data-bbox="738 887 1442 936">NOTE</th></tr></thead><tbody><tr><td data-bbox="384 936 738 1144"> - The temperature is displayed by default in Celsius. - Press the (COOL) and (HEAT) buttons at the same time above 3s, you can set the (C) or (F). </td><td data-bbox="738 936 1442 1144"> <i>Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.</i> </td></tr></tbody></table>		NOTE	- The temperature is displayed by default in Celsius. - Press the (COOL) and (HEAT) buttons at the same time above 3s, you can set the (C) or (F).	<i>Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.</i>
	NOTE				
- The temperature is displayed by default in Celsius. - Press the (COOL) and (HEAT) buttons at the same time above 3s, you can set the (C) or (F).	<i>Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.</i>				

REMOTE CONTROLLER MONITOR

SPEED

AUTO

TURBO

RUN

88.5

00.5

HOUR ON OFF

00.5

AUTO

COOL

DRY

HEAT

FAN

HEALTH

ECO

SLEEP

SILENCE

ELE.H

DISPLAY

LIGHT


**

**


**

4. USAGE


FIX BATTERIES

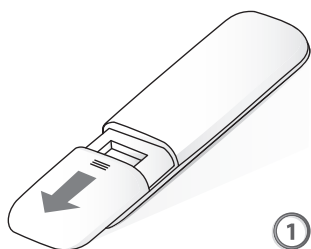

Slide to open the cover according to the direction indicated by the arrowhead.

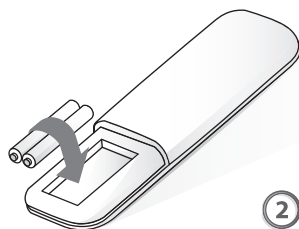

Insert two brand new batteries (7#), and position the batteries to the right electric poles (+ & -).

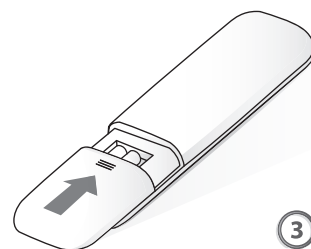

Put back the cover.

AUTO OPERATION MODE

1. Press the **(MODE)** button, select the auto operation mode.
2. By pressing the **(SPEED)** button, you can select the fan speed from **LOW, MID, HIGH, AUTO**.
3. Press the **(ON/OFF)** button, the air-conditioner starts to operate.
4. Press the **(ON/OFF)** button again, the air-conditioner stops.

NOTE

The humidifying function is not available under the dry mode.

COOLING / HEATING OPERATION MODE

1. Press the **(MODE)** button, select the Cooling or Heating operation mode.
2. By pressing the **(+)** or **(-)** button, you can set the temperature range from **16°C (60°F) ~ 32°C (90°F)**, the display changes as you touch the button.
3. By pressing the **(SPEED)** button, you can select the fan speed from **LOW, MID, HIGH, TURBO, AUTO**.
4. Press the **(ON/OFF)** button, the air-conditioner starts to operate.
5. Press the **(ON/OFF)** button again, the air-conditioner stops.

NOTE

The cold wind type has no heating function.

FAN OPERATION MODE

1. Press the **(MODE)** button, select the fan operation mode.
2. By pressing the **(SPEED)** button, you can select the fan speed from **LOW, MID, HIGH**.
3. Press the **(ON/OFF)** button, the air-conditioner starts to operate.
4. Press the **(ON/OFF)** button again, the air-conditioner stops.

NOTE

In the fan mode, the temperature settings is non-effective.


DRYING OPERATION MODE

1. Press the **(MODE)** button, select the drying operation mode.
2. By pressing the **(+)** or **(-)** button, you can set the temperature range from **16°C (60°F) ~ 32°C (90°F)**, the display changes as you touch the button.
3. Press the **(ON/OFF)** button, the air-conditioner starts to operate.
4. Press the **(ON/OFF)** button again, the air-conditioner stops.

NOTE

In the dry mode, the speed settings is non-effective.

Scan & download full version of manuals

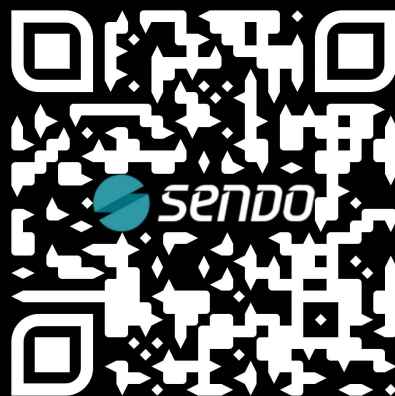

www.sendo.world/manuals/